


KP N/A Ultra Flow Air Filter Kit Installation Manual (12F/15F/LX/160)

Tools:

- 1) Flat head screw driver
- 2) ¼-3/8 Wrench
- 3) 12mm Socket
- 4) 10mm Socket
- 5) 7mm Socket

1) Remove stock air box with 12mm Socket and 7mm socket to remove the two hose clamps.

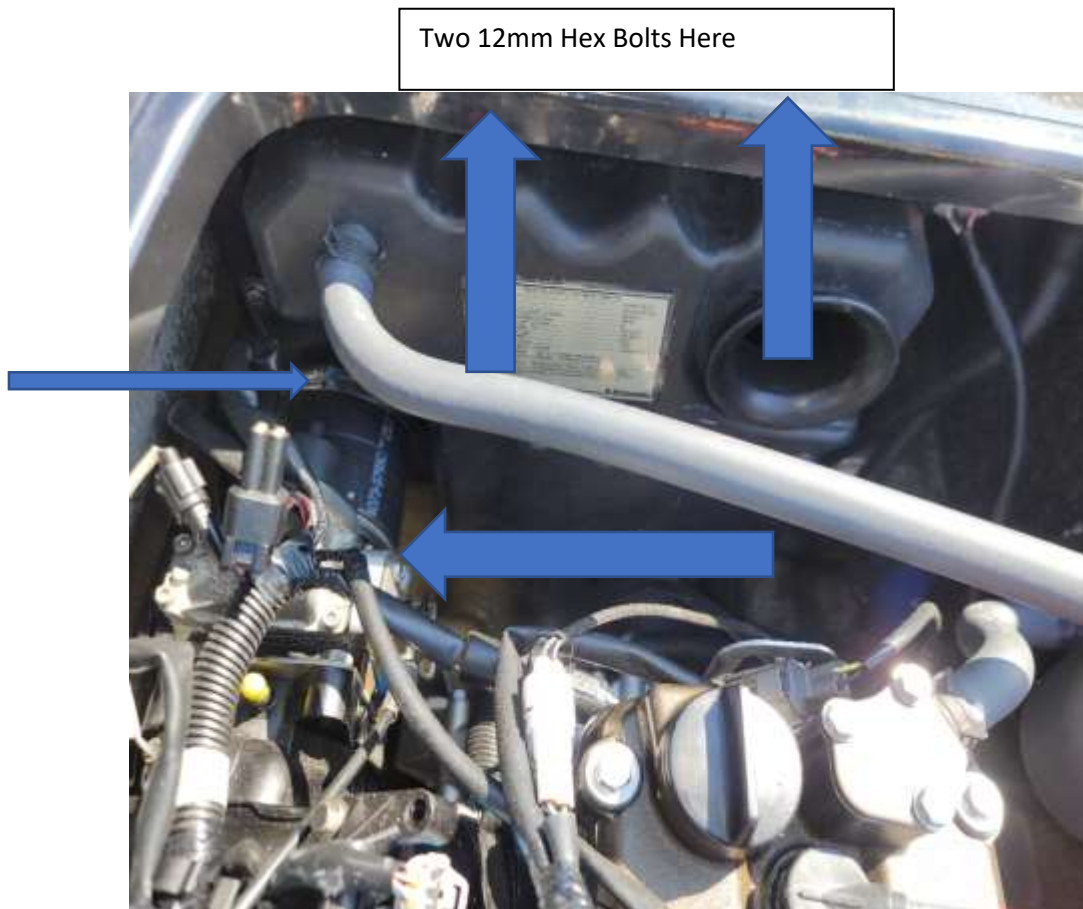

NOTE It may be difficult to remove air box from hull. You may need to remove the 10mm hex bolts and separate the box to remove from hull.

2) Install KP Air Filter on throttle Body. Reuse an existing hose clamp from old air box and secure air filter. On STX 160, the air filter sits facing straight up. ALL OTHER MODELS are as per picture below. Apply a light coating of oil to black 90 degree barb and install on air filter facing up. Secondly, install Breather hose to catch can as below. Install pre filter over air filter.



Installation Completed!